

PANASONIC® 600 BASE UNIT



Quick Function Guide




The following figure displays the hardware features on the Panasonic 600 Base Unit cordless phone. The table lists each numbered feature shown in this figure.

PANASONIC 600 HARDWARE FEATURES

1. Ringer/Charge/Message Indicator
2. Headset Jack
3. Talk/Speakerphone Key
4. Navigator Key (press to select and scroll up/down/left/right) If phone is idle, pressing the following keys performs the following functions:
5. Hold/Message Key
6. Silent Mode Key (when pressed for 2 seconds when phone is idle turn silent on or off)
7. Line Key (confirms line status or seize a line)
8. Receiver
9. Display
10. Soft Keys
11. Power/Cancel Key (press and hold to turn handset on or off)
12. XFER/CLR Key (transfer call to another party and clear digits/characters)
13. FUNC Key – Function Keys:
14. Microphone
15. Charge Contacts for handset
16. Strap Holes
17. Speaker

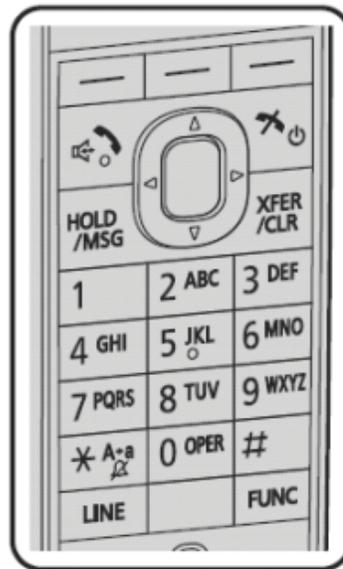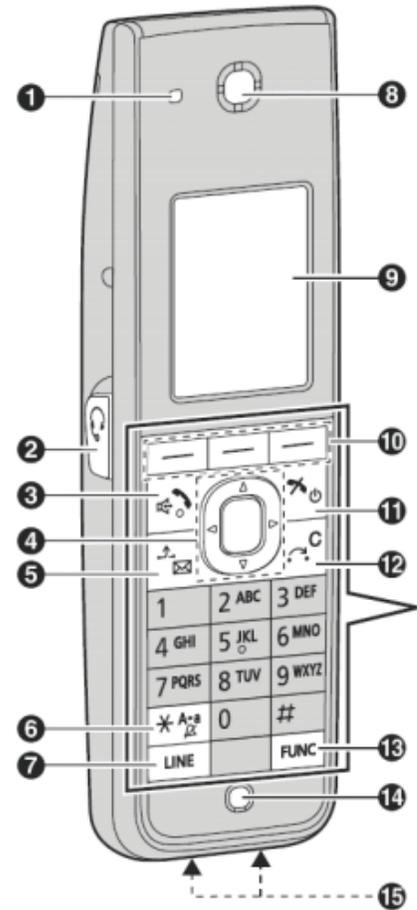

[Back View]

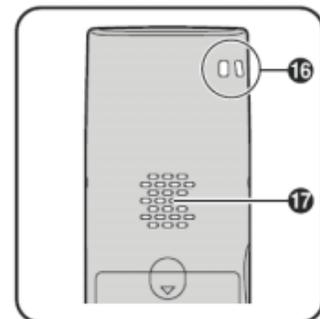

For more information, visit epb.com/customer-support/business-support or call 423-648-1500, option 2



Voicemail

- To set up Voicemail **Dial *98** on the phone and **enter the pin 4729#**
- After the first time Dialed, the system will make you **change the pin**
- Then listen to the prompts to set the remainder of the Voicemail up
- Message **light will flash** on the phone if you **have a Voicemail**
- To check Voicemail, **Dial *98**

CALL FORWARDING:

- **Dial *72** plus the **10-digit forwarding number** and **listen for beeps**
- Remove forwarding **Dial *73** and listen for beeps

CALL TRANSFER – BLIND TRANSFER:

- Press **BLIND** button far right button under display
- **Dial EXT** number or phone number
- Press **CALL** button on middle button under display

CALL TRANSFER – SCREENED TRANSFER:

- Press **XFER/CLR** key
- **Dial** the **EXT** number to send transfer
- Press **CALL** button on middle button under display
- When **EXT answers**, inform of incoming transfer
- Complete transfer by pressing **XFER/CLR** key again
- If person cannot accept transfer, press **CANCEL** button **two times** (far right button under display) and original EXT will be reconnected with caller
- Person declining transfer will hear what sounds like a busy signal to confirm transfer was cancelled

CALL HOLDS:

- Press **HOLD/MSG** key to place caller on hold
- You cannot pick up call holds from other EXTs - must do a transfer

CALL MUTES:

- Press **MUTE** key - far left button under display
- **MUTE** key will flash while **mute** is on
- Toggle **MUTE** key to resume conversation

CHECK CALL HISTORY:

- Press **far right** button under display.