

# JV35W Handset

## Quick Reference Guide



### 1. Ringer Volume Switch

Adjust low, medium or high.

### 2. Announcement Switch

Choose between factory “Presets”, or place in “Prog” to program your own number button announcements, then engage them in the “Custom” setting.\*\*

### 3. Audio Output Port

Phone is compatible with some neck loops.\*

### 4. Emergency Buttons

Preset to contact your local police, fire and medical personnel or program them all to ring 911.

### 5. Braille Characters

### 6. Raised Letters

For easy identification.

### 7. Redial

Redials last outgoing number dialed.

### 8. Flash

Enables you to receive another incoming call when you are on a call (Call Waiting).

### 9. Volume Control

Slide right to increase volume, slide left to decrease volume.

### 10. Boost

Press for extra volume amplification.

### 11. Program

Press to program announcements.\*\*

### 12. Visual Ringer



Glow red when phone rings or is in use.

### 13. Tone Volume

Slide right to increase volume, slide left to decrease volume.

### 14. Memory

Press to set up speed dial numbers.\*\*

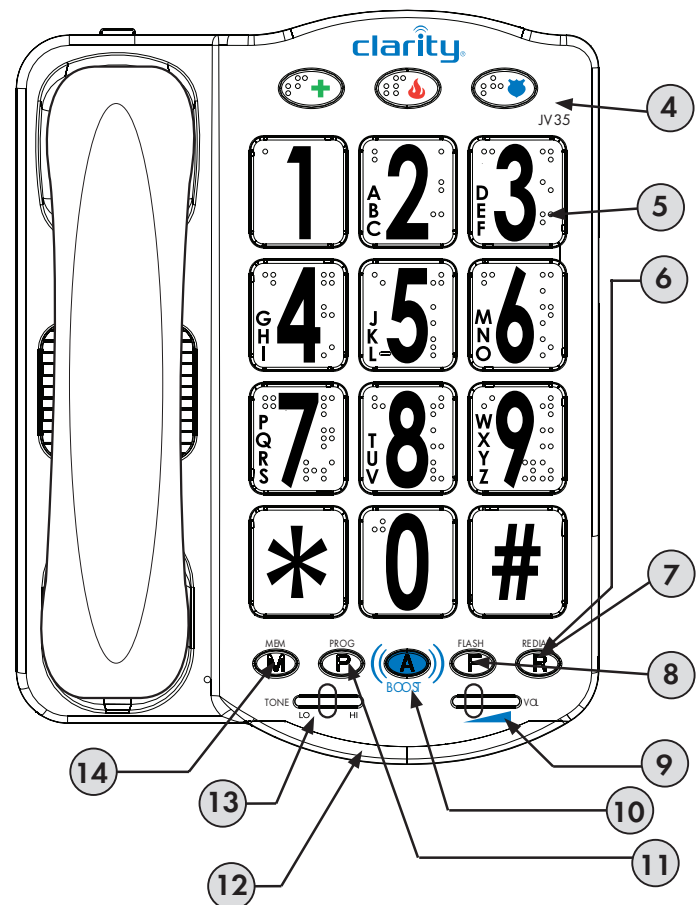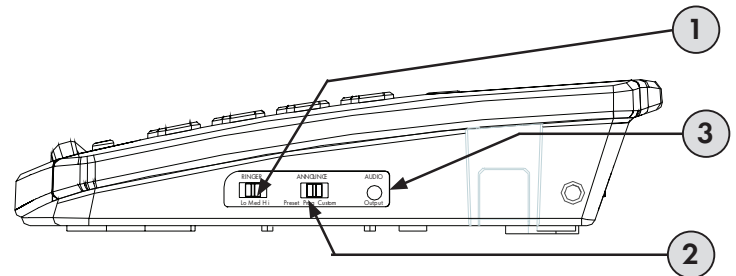

If you have any questions or need additional assistance using your phone, please feel free to call EPB Tech Pros anytime day or night at 423-648-1500.

\* Consult with your hearing aid or cochlear implant specialist BEFORE using a neck loop or speech processor.

\*\*For a full user guide of this model, please visit [epb.com/support](http://epb.com/support)